

ストップリスト

I Great (第1鍵盤)	C-a³
1. Double Diapason	16'
2. Open Diapason	8'
3. Stopped Diapason	8'
4. Gamba	8'
5. Principal	4'
6. Harmonic Flute	4'
7. Fifteenth	2'
8. Mixture III	1 1/3'
9. Posaune	8'
Tremulant	
II Swell (第2鍵盤)	C-a³
10. Geigen Diapason	8'
11. Gedackt	8'
12. Salicional	8'
13. Voix Céleste	8'
14. Principal	4'
15. Rohr Flute	4'
16. Flageolet	2'
17. Sesquialtera II	2 2/3'
18. Mixture III	2'
19. Contra Fagotto	16'
20. Cornopean	8'
21. Oboe	8'
Tremulant	
III Solo (第3鍵盤)	C-a³
22. Harmonic Flute	8'
23. Clarinet	8'
24. Tromba	8'
Cymbelstern	
Pedal (足鍵盤)	C-f¹
25. Open Wood	16'
26. Sub Bass	16'
27. Principal	8'
28. Open Flute	8'
29. Octave	4'
30. Trombone	16'
31. Posaune	8' (from No.9)

Swell to Great	
Solo to Great	
Great to Pedal	
Swell to Pedal	
Solo to Pedal	
Mechanical key action	
Electric stop action	
8×200 general combinations	
9×6 Great divisional combinations	
9×8 Swell divisional combinations	
製作	Kenneth Tickell & Company Ltd ケネス・ティッケル社（英国）
組立	Kenneth Tickell & Company Ltd ケネス・ティッケル社
パイプ数	1,899本
調律法	Brown
設置年月	2013年9月
座席数	250